

Blind rivet hand nut setting tools

GBM 5

Spare part no.	Article no.	Designation
5-1	145 7165	Tool housing
5-2	145 7166	Tool shanks
5-4	145 6603	Sleeve grip for tool housing no. 5-1
5-5	145 6604	Sleeve grip for tool housing no. 5-2
5-6	145 7167	Bolt
5-20	145 7168	Snap ring
5-21	145 6608	Supporting chain
5-22	145 6609	Spring dowel sleeve
5-23 •	145 6610	Self opening spring
5-25	145 7169	Lock activator
5-26	145 7170	Adjustment ring
5-27	145 7171	Knurled nut
5-28	145 7172	Locking nut
5-29 •	145 7173	Nosepiece M 4
5-30 •	145 7174	Nosepiece M 5
5-31 •	145 7175	Nosepiece M 6
5-32 •	145 7176	Threaded mandrel M 4
5-33 •	145 7177	Threaded mandrel M 5
5-34 •	145 7178	Threaded mandrel M 6
17	143 4079	Maintenance wrench SW 10

• Wearing parts

GBM 10

Spare part no.	Article no.	Designation
101	145 7092	Tool housing with sleeve grip no. 115
102	145 6627	Tool shanks with sleeve grip no. 116
103	143 4772	Lock activator
107	145 7094	Stop screw with scale label
108	143 4773	Locking nut
109	143 4074	Lever
112	143 4076	Bolt
113	143 4075	Bolt
114	144 5259	Snap ring
115	150 9066	Sleeve grip for tool housing no. 101
116	150 9068	Sleeve grip for tool housing no. 102
120•	144 5261	Self opening spring
130•	145 7096	Threaded mandrel M 3
140•	143 4776	Threaded mandrel M 4
150•	143 4779	Threaded mandrel M 5
160•	143 4781	Threaded mandrel M 6
131	145 7095	Nosepiece M 3
141 •	143 4777	Nosepiece M 4 and 8-32"
151 •	143 4780	Nosepiece M 5 and 10-32"
161 •	143 4782	Nosepiece M 6 and 1/4-20"
162	144 5739	Coil spring
A 140	143 4784	Threaded mandrel 8-32"
A 150	143 4783	Threaded mandrel 10-32"
A 160	143 4785	Threaded mandrel 1/4-20"

• Wearing parts

